




# Quick installation guide

## IBM Microdrive™

### CF+ Type II

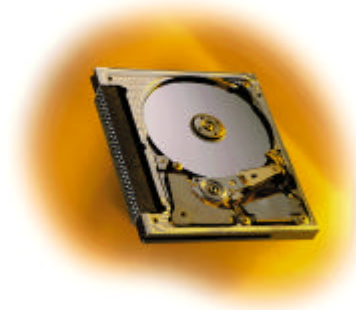

Models: DSCM-11000  
DSCM-10512  
DSCM-10340

---

#### Handling precautions

---

- Follow these suggestions to optimize the use of your IBM Microdrive, as well as those devices in which it is installed:
- Do not seal the breather hole! Sealing the breather hole may result in loss of data.
- Do not press on the drive! Do not apply any force to the drive during handling or installation.
- Always handle the drive with care to prevent damage from shock, vibration, or electrostatic discharge (ESD).
- Handle the drive carefully by the edges. Do not touch any exposed printed circuit board.
- Do not write on the label or remove it. Do not apply additional labels.
- Always carry the drive in its plastic case.
- Do not drop the drive.
- Do not expose the drive to wet conditions.
- Do not place the drive near a strong magnetic field.
- Do not expose the drive to extreme temperatures.
- Do not use the drive in CF+™ Type II slots without an ejection mechanism.
- The Microdrive may become hot during operation. Be careful when removing the drive from the host device immediately after operation.

---

#### Quick installation procedure

---

*Note: Back up all data before beginning installation!*

Refer to the manual that came with your computer, camera, or other device to determine if it is compatible with the CF+ Type II or the PC card type II drive/interface adapter and to find instructions on inserting and removing the IBM microdrive.

- *Using the IBM Microdrive with a PC card adapter*  
With a PC card adapter the IBM Microdrive can be installed in devices such as digital cameras or PCs that have a PC card type II slot. If your Microdrive did not come with a PC card, it can be purchased separately.

With both facing upward (the arrow at the upper left corner of the Microdrive), slide the IBM Microdrive firmly along the track into the PC card adapter. [If either is not facing upward, the Microdrive will not fit into the track.]

*Note:* When inserting or removing the PC card, hold the PC card, not the IBM Microdrive.

- *Using the IBM Microdrive without a PC card adapter*  
The IBM Microdrive is compatible with the CF+ Type II standard and can be used in devices with the CF+ Type II slot without a card adapter. Refer to the manual shipped with the device to determine its slot type.

#### **If your PC does not recognize the IBM Microdrive**

With the Plug & Play feature of Windows® 98 and 95 your PC should automatically recognize the IBM Microdrive. If it does not do so, do the following:

1. In Windows select *Start* and *Settings*.
2. Click *Control Panel*.
3. Click the *Hardware* icon, click *Next*.
4. Select *No* in the *Hardware Wizard*, click *Next*.
5. Select *Hard disk controller* as the hardware type, click *Next*.
6. Specify *Standard IDE/ESDI hard disk controller*

---

## Operating systems

---

The IBM Microdrive has been tested for general compatibility with the following operating systems:

- Windows 98
- Windows 95
- Windows CE
- Apple® OS (refer to the URL below for the applicable operating systems)

Other operating systems may be compatible with the IBM Microdrive but have not been tested.

---

## Product information

---

The latest product information can be obtained from

*<http://www.ibm.com/storage/microdrive>*

This includes

- technical tips
- complete product specifications
- a list of compatible devices



© International Business Machines Corporation 2000

[www.ibm.com/harddrive](http://www.ibm.com/harddrive)

### IBM Technology Group Support Center

Telephone: 888.426.5214 or 507.286.5825

E-mail: [drive@us.ibm.com](mailto:drive@us.ibm.com)

### Singapore Technology Group Support Center

Telephone: (65)6418.9595 or 1800.418.9595

E-mail: [drive@sg.ibm.com](mailto:drive@sg.ibm.com)

### UK Technology Group Support Center

Telephone: 44.1475.898.125

E-mail: [drive@uk.ibm.com](mailto:drive@uk.ibm.com)

### Germany Technology Group Support Center

Telephone: 49.7032.153050

E-mail: [drive@de.ibm.com](mailto:drive@de.ibm.com)

### IBM Systems Storage Division

5600 Cottle Road

San Jose CA 95193

[www.ibm.com/storage](http://www.ibm.com/storage)

Printed in the United States of America

09-2000

All Rights Reserved

IBM is the registered trademark of International Business Machines Corporation and Microdrive is the trademark of International Business Machines Corporation.

Other company, product, and service names may be trademarks or service marks of others.

Produced by the IBM Technology Group Support Center.

Hark disk drive specifications, IBM Microdrive with CF Type II interface, version 1.0, DSCM-11000/10512/10340

Product Description data represents IBM's design objectives and is provided for comparative purposes; actual results may vary based on a variety of factors. This product data does not constitute a warranty. Questions regarding IBM's warranty terms or methodology used to derive this data should be referred to the IBM Technology Group Support Center.

Data is subject to change without notice.

Date: 25 September, 2000